

FO CABLE JACKET OPTIONS


■ STANDARD - PVC over Steel Monocoil



PVC over a steel helical winding. Good general purpose jacket: moderate crush resistance, liquid tight, not MRI compatible.

Temperature Range +10 to 105°C

■ Option C1 - Interlocking Stainless Steel

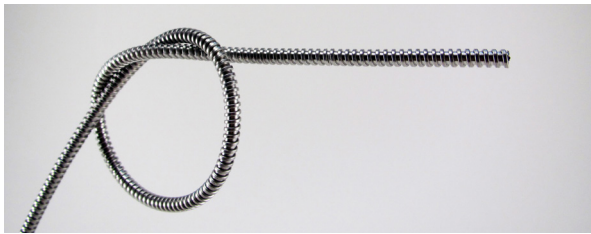

Maximum strength and temperature range, crush proof, flexible, vacuum compatible. Good for long lengths.

Temperature Range -150 to 800°C

■ Option C2 - Silicone Tubing



Maximum flexibility, no crush resistance, no tensile strength. MRI and Bio-compatible, liquid tight.

Temperature Range -62 to +232°C

■ Option C3 - Silicone over Nylon Wrap



Light crush resistance, moderate flexibility, no tensile strength. MRI and Bio-compatible, liquid tight. Good for short lengths only (<2 m) .

Temperature Range -62 to +232°C