

Fiberoptic Sensor - Reflectance Dependent*

Model D21





Fiberoptic Cable & Sensor Tip - Actual Size

For The Measurement of Distance, Displacement and Vibration
of Small Targets $> \varnothing 530 \mu\text{m}$

Features

- Reflectance Dependent Output with Dual Functions: Far Side/Near Side
- $\varnothing 530$ Micron Target Spot Size (0.021 inch)
- 2 mm Total Operating Range
- 3 mv/ μm Far Side Sensitivity
- 45 mv/ μm Near Side Sensitivity

Tip & Cable Dimensions

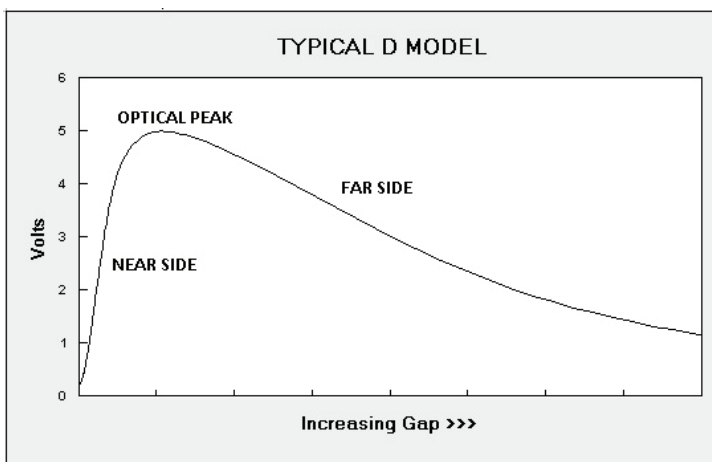

FEATURE	mm	inch
Tip Outer Diameter, $\varnothing C$	0.813	0.032
Fiberoptic Diameter	0.53	0.021
Tip Length, C	38.1	1.5
Collar Length, B	12.7	0.5
Collar Diameter, $\varnothing B$	6.35	0.25
Cable Length, A	914	36
Cable Diameter, $\varnothing A$	4.27	0.168
Cable Min. Bend Radius	12.7	0.75

The output function includes a region of maximum output voltage referred to as the OPTICAL PEAK. The useable operating range of these devices includes linear ranges on both sides of the peak, as well as operation at the peak itself. Operation in the NEAR SIDE region gives high sensitivity with limited operating range. Operation on the FAR SIDE gives moderate sensitivity with greater operating range. Operation at the Optical Peak has zero displacement sensitivity, but is reflectance dependent.

*These are reflective type transducers based upon detecting the intensity of reflected light. The output is proportional to:


- distance between the sensor tip and target; and,
- the reflectivity of the target surface.

D models are commonly used in applications where the target reflectivity stays constant; i.e., the target has a reciprocating or vibratory motion parallel to the axis of the sensor.

Analog sensors are fast responding units ideal for process control and vibration measurements in dynamic applications:

- DC-20 KHz bandwidth is standard
- DC-200 KHz or higher (up to 2 MHz) is optional
- DC-100 Hz providing best resolution, is optional

Standard single channel units include amplifier and sensor tip with 914 mm long (3 foot) fiberoptic cable, require +12 VDC input power, and provide 0 to +5 volt analog output with DC - 20 KHz bandwidth.

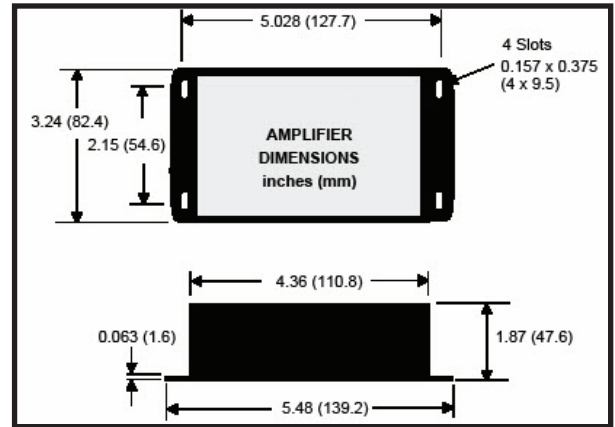


Standard Enclosure for D Models

CONVERTING THE ANALOG OUTPUT TO DISTANCE

A calibration chart is provided with each sensor giving the voltage output response to distance. There are three ways to derive accurate distance measurements:

- within the bounds of the linear range, convert the change in voltage output as follows:

$$\text{Distance} = \Delta \text{ milliVolts} \div \text{Sensitivity} = \mu\text{m}$$
- over the non-linear range, create a lookup table using the XY calibration data points, or
- use a polynomial curve fit to accurately map the sensor's output function

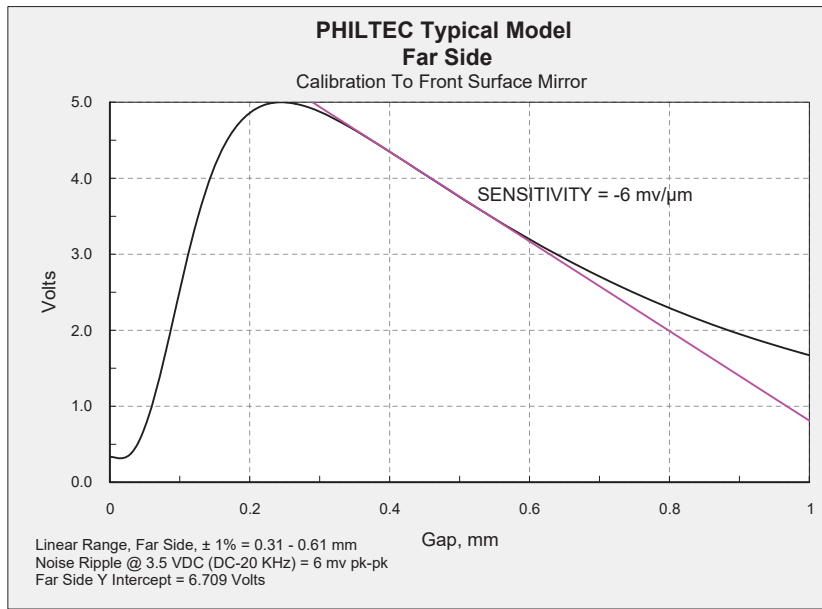

FACTORY CALIBRATIONS


Calibration charts are provided for Near and Far Side regions. A typical factory supplied calibration chart provides:

- Sensor model & serial number
- Date of calibration
- The linear sensing range
- The slope sensitivity
- The y intercept of the linear range
- The AC noise ripple

The XY calibration data points are made available upon request.

END USER CALIBRATION

The effect of changing target reflectance is to shift the voltage output higher or lower. Factory calibrations have the Peak Voltage set to 5.000 volts. A gain control is provided for calibration of the sensor output to various target surfaces. In-situ calibration is performed simply, by adjusting the sensor's tip-to-target gap until the peak output voltage is attained, and then by using the gain control to set the peak voltage to full scale (5.000 volts). After setting the peak to 5 volts, the factory gap calibration chart applies for the target being measured. This procedure allows the sensor to be used to perform precision linear motion measurements on most materials.

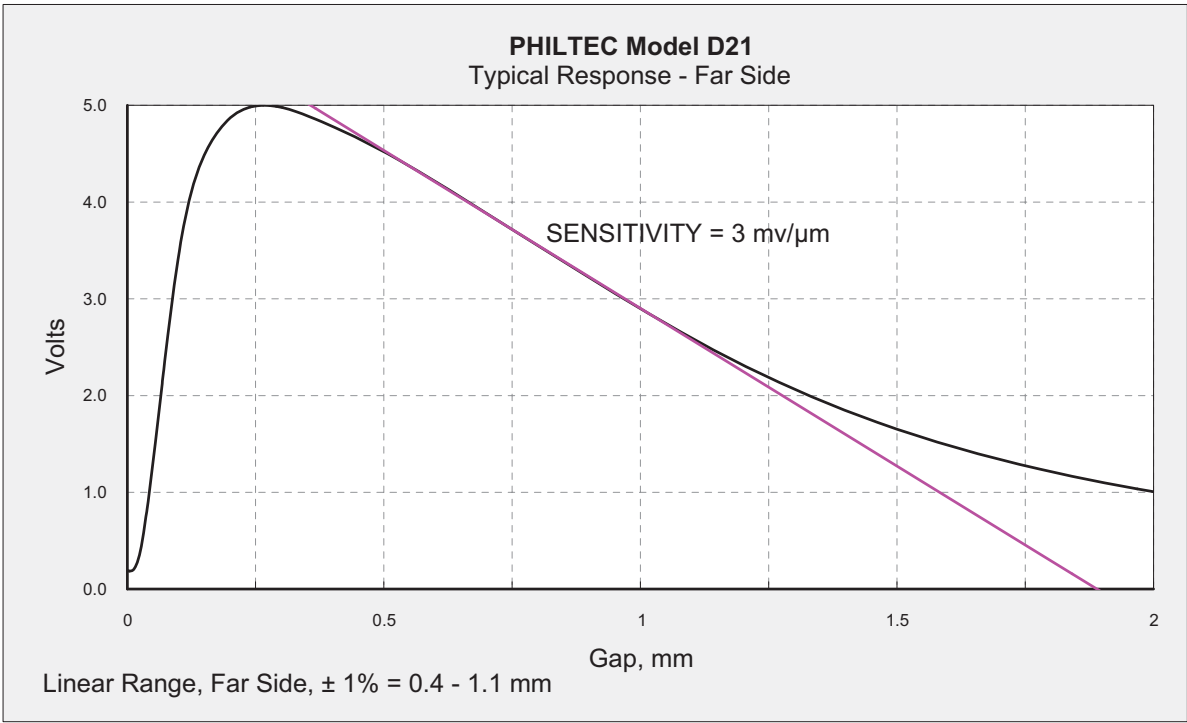

Conversions

- 1 μm = 39.37 μinch
- 1 mm = 39.37 mils
- 1 mil = 0.001 inch
- 1 mil = 25.4 μm
- 1 mil = 0.0254 mm

Standard Specifications - D21 Far Side						
Electronics		Fiberoptics		Analog Output (0-5 Volts)		
Light Source	LED, 850 nm	Light Beam Spread	30°	Total Range	0.070 in.	1.75 mm
Input Voltage	+12 to +24 VDC	Tip Material	300 Series SS	Linear Range*	0.027 in.	0.70 mm
Input Current	125 ma max	Tip Epoxy Outgas	0.3% @ 200°C 2.4% @ 300°C	Nominal Standoff**	0.030 in.	0.75 mm
Bandwidth	DC-20 KHz 3 db down	Tip Operating Pressure	15 bar	Nominal Sensitivity*	75 mv/mil	3 mv/μm
Isothermal Drift	0.5%	Tip Operating Temperature	-55 to 200°C continuous; to 300°C intermittent 1-2 hours	Resolution**		
Operating Temperature	0 to 70°C	Cable Operating Temperature	10 to 107°C	DC - 200 KHz	40 μin	1 μm
Weight	0.7 kg - 1.5 lbs.	Cable Jacket	PVC over Steel Monocoil	DC - 20 KHz	20 μin	0.5 μm
				DC - 100 Hz	10 μin	0.25 μm

NOTES: *Nominal Standoff* = the gap (distance) that places the sensor at the middle of the linear operating range.


* Standard Specifications provide nominal values only. Actual production values may vary by as much as ±15%.


** These specifications represent best case performance where:
the target is flat, smooth and highly reflective,
the sensor is perpendicular to the target,
the sensor is gapped into its linear range,
fiberoptic cable lengths are standard and the cable is not connectorized,
with dull targets, resolution values can be 2x - 3x higher.

*** for best results, sensors have BNC outputs, not bare wire hookup

FREQUENCY RESPONSE

The standard D sensor has a 20 KHz 2-pole butterworth frequency rolloff. With the 3 db down point set at 20 KHz, the output is flat out to approximately 6 KHz.

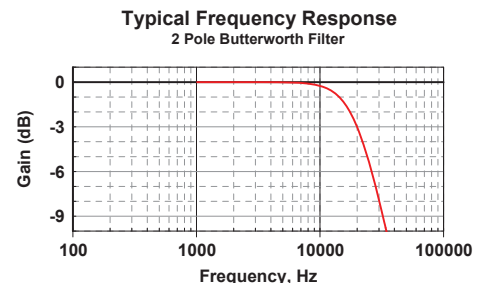

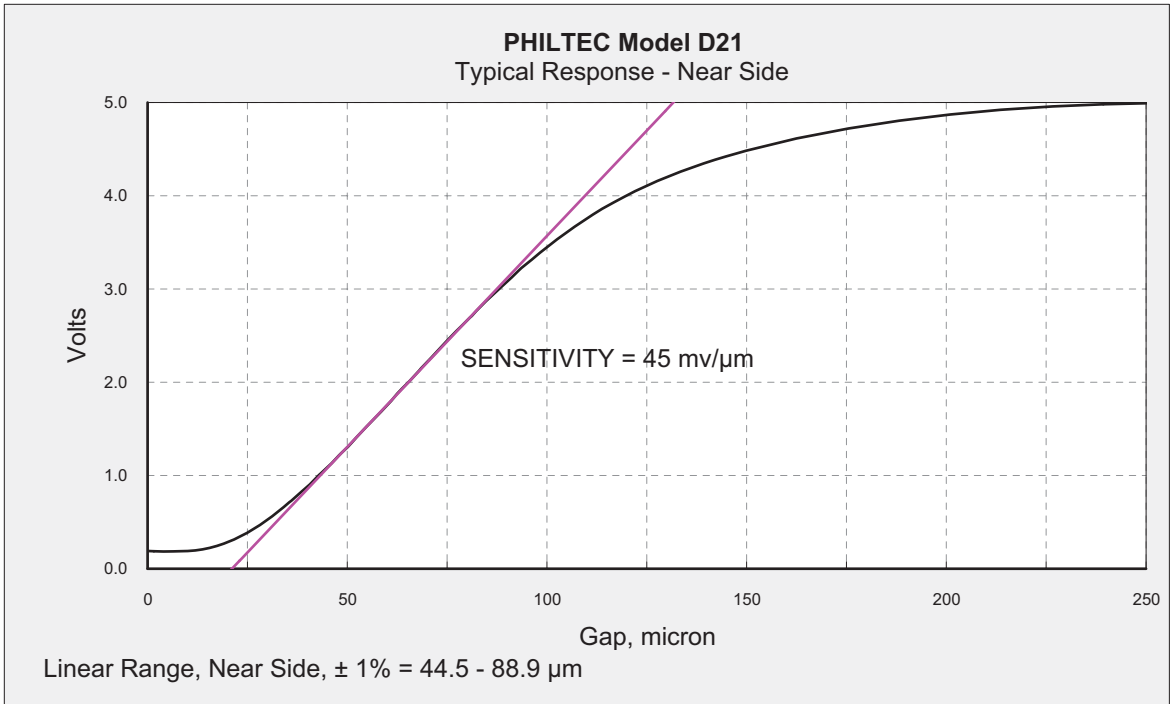

Conversions

- 1 μm = 39.37 μinch
- 1 mm = 39.37 mils
- 1 mil = 0.001 inch
- 1 mil = 25.4 μm
- 1 mil = 0.0254 mm

Standard Specifications - D21 Near Side						
Electronics		Fiberoptics		Analog Output (0-5 Volts)		
Light Source	LED, 850 nm	Light Beam Spread	30°	Total Range	10 mils	250 μm
Input Voltage	+12 to +24 VDC	Tip Material	300 Series SS	Linear Range*	1.6 mils	40 μm
Input Current	125 ma max	Tip Epoxy Outgas	0.3% @ 200°C 2.4% @ 300°C	Nominal Standoff*	2.5 mils	65 μm
Bandwidth	DC-20 KHz 3 db down	Tip Operating Pressure	15 bar	Nominal Sensitivity*	1.2 mv/μin	45 mv/μm
Isothermal Drift	0.5%	Tip Operating Temperature	-55 to 200°C continuous; to 300°C intermittent 1-2 hours	Resolution**	4 μin	0.1 μm
Operating Temperature	0 to 70°C	Cable Operating Temperature	10 to 107°C	DC - 200 KHz	2 μin	50 nm
Weight	0.7 kg - 1.5 lbs.	Cable Jacket	PVC over Steel Monocoil	DC - 100 Hz	1 μin	25 nm

NOTES: *Nominal Standoff* = the gap (distance) that places the sensor at the middle of the linear operating range.


* Standard Specifications provide nominal values only. Actual production values may vary by as much as ±15%.

** These specifications represent best case performance where:
 the target is flat, smooth and highly reflective,
 the sensor is perpendicular to the target,
 the sensor is gapped into its linear range,
 fiberoptic cable lengths are standard and the cable is not connectorized,
 with dull targets, resolution values can be 2x - 3x higher.

*** for best results, sensors have BNC outputs, not bare wire hookup

FREQUENCY RESPONSE

The standard D sensor has a 20 KHz 2-pole butterworth frequency rolloff. With the 3 db down point set at 20 KHz, the output is flat out to approximately 6 KHz.

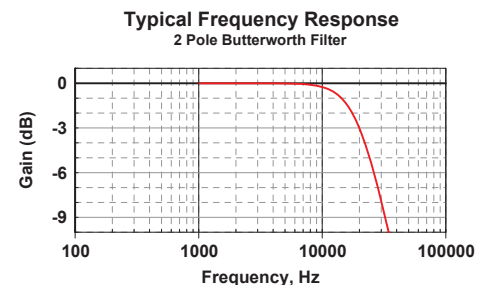

PHILTEC, INC., ANNAPOLIS, MD USA 410-757-4404

Fax 410-757-8138 e-mail sensors@philtec.com